Datasheet last updated 5/9/2025 6:38:11 AM (supersedes all previous editions)

Alleima

Pressurfect® XP Tube and pipe, seamless Datasheet

Pressurfect® XP is a duplex (austenitic-ferritic) stainless steel used for high pressure gasoline direct injection (GDI) fuel systems. The grade is characterized by:

- Very good resistance to stress corrosion cracking (SCC)
- Good resistance to general corrosion and pitting
- High strength approximately twice the proof strength of austenitic stainless steels
- Physical properties that offer design advantages
- Ease of fabrication and good toughness

Standards

- UNS: S32304
- EN Number: 1.4362
- EN Name: X2CrNiN23-4

Product standards

- ASTM A789, A790
- EN 10216-5

Approvals

- Approved by the American Society of Mechanical Engineers (ASME) Boiler and Pressure Vessel Code, Section VIII, div. 1 construction
- ASME B31.3 Process Piping
- VdTÜV-Werkstoffblatt 496

Chemical composition (nominal)

Chemical composition (nominal) %

С	Si	Mn	Р	S	Cr	Ni	Мо	Cu	N
≤0.030	≤1.0	≤2.0	≤0.035	≤0.015	22.5	4.5	0.3	0.3	O.1

Applications

Pressurfect* XP has been developed specifically for high-pressure fuel rails for gasoline direct injection (GDI)

systems in next generation internal combustion engines.

Corrosion resistance

General corrosion

Due to the high chromium content and its well-balanced composition Pressurfect® XP possesses very good corrosion resistance in acidic environments. The table below gives the corrosion rate in different acids and Figures 1 - 3 show isocorrosion diagrams for Pressurfect® XP in sulfuric, formic and nitric acid, respectively.

Corrosion rates in acid-water mixtures, mm/year (mpy). Activated specimens, 1+3+3 days, average of the last two periods for two specimens.

Concentration	Temperature	Corrosion rate, mm/year (mpy)
Weight-%	°C (°F)	Pressurfect [™] XP	ASTM 304L
Acetic acid, CH ₃ COOH			
20	В	O.O1 (O.4)	
50	В	0	0.04 (1.6)
70	В	0	
90	В	0.01 (0.4)	
Formic acid, HCOOH			
5	60 (140)	0	
10	В	0.04 (1.6)	0.80 (32)
30	60 (140)	0	
30	90 (194)	0	
80	90 (194)	0	
90	60 (140)		
Hydrochloric acid, HCI			
0.5	40 (104)	0	
1	40 (104)	0.30 (12)	
Nitric acid, HNO ₃ (5x2 day	s)		
5	В	0.16 (6.4)	0.16 (6.4)
Phosphoric acid, H ₃ PO ₄			
30	В	0.10 (4)	0.20 (8)
50	100 (212)	0.04 (1.6)	0.09 (3.6)
60	90 (194)	0.01 (0.4)	0.2 (0.8)

80	80 (176)	0.01 (0.4)	0.01 (0.4)
Sulfuric acid, H ₂ SO ₄			
5	60 (140)	0	
5	90 (194)	0.06 (2.4)	3.6 (144)
10	60 (140)	0.10 (4)	
10	70 (158)	0.14 (5.6)	
10	80 (176)	0.20 (8)	
15	50 (122)	0.17 (6.8)	
20	30 (86)	0.20 (8)	

B = Boiling

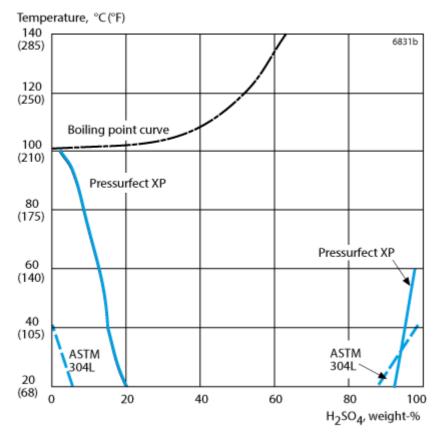


Figure 1. Isocorrosion diagram for Pressurfect XP and ASTM 304L in a naturally aerated stagnant sulfuric acid. The curves represent a corrosion rate of 0.1 mm/year (4 mpy).

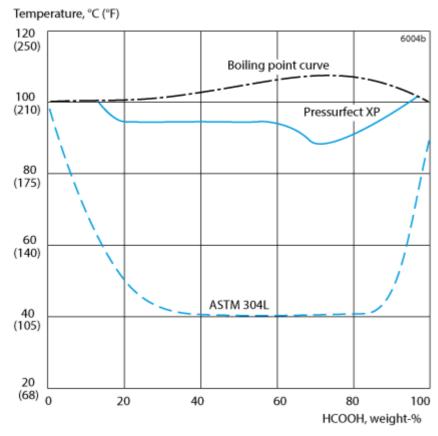


Figure 2. Isocorrosion diagram for Pressurfect XP and ASTM 304L in formic acid. The curves represent a corrosion rate of 0.1 mm/year (4 mpy).

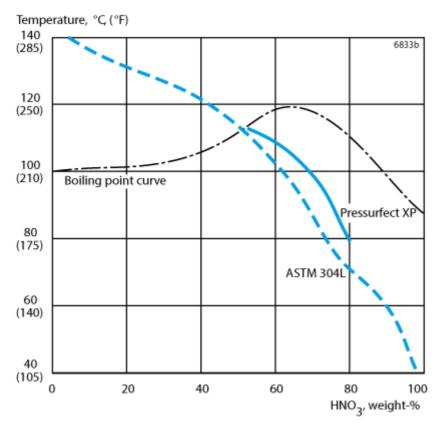


Figure 3. Isocorrosion diagram for Pressurfect XP and ASTM 304L in nitric acid. The curves represent a corrosion

rate of 0.1 mm/year (4 mpy).

Pitting

The pitting resistance of stainless steel is determined primarily by its chromium, molybdenum and nitrogen contents. Manufacturing and fabrication practices, e.g. welding, are also of vital importance for the actual performance in service, where resistance to pitting is concerned.

One parameter for comparing the pitting resistance of different steels is the PRE-number (Pitting Resistance Equivalent).

The PRE is defined as, in weight-%: PRE = % Cr + 3.3 %x Mo + 16 x % N

The minimum PRE numbers for Pressurfect® XP and the standard austenitic stainless steel ASTM 304L is given in the following table.

Alloy	%Cr	%Мо	%N	PRE min.
Pressurfect XP	23	-	0.1	24
ASTM 304L	18.4	-	-	18

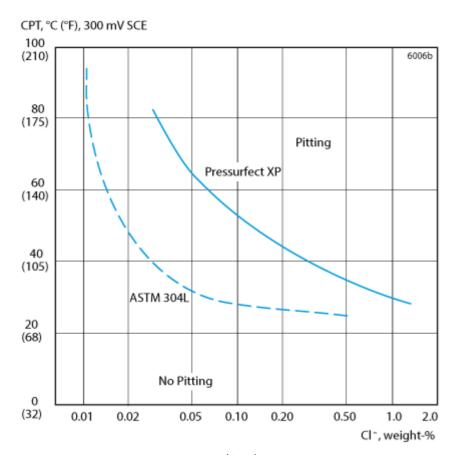


Figure 4. Critical pitting temperature (CPT) for Pressurfect XP and ASTM 304L in neutral chloride solutions (potentiostatic determination at +300 mV/SVE).

Crevice corrosion

As is the case for pitting corrosion, the resistance to crevice corrosion is related to the chromium, molybdenum and nitrogen contents. Thus, Pressurfect* XP possesses better resistance to crevice corrosion than steels of the ASTM 304/304L type.

Stress corrosion and cracking

Because of its two-phase structure and its well-balanced composition, Pressurfect* XP possesses very good resistance to stress corrosion cracking (SCC). This is evident from the results of tests in both concentrated chloride solutions and oxygen-containing dilute chloride environments.

Figure 5 shows the results of tests carried out in 40% CaCl₂ solution at 100°C (212°F). In this environment, the stress that is required to cause fracture due to SCC (known as the threshold stress) is much higher for Pressurfect° XP than for ASTM 304/304L. This demonstrates the superior resistance of Pressurfect° XP.

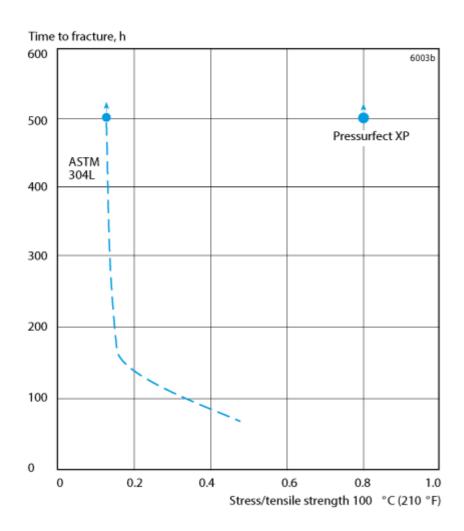


Figure 5. Results of SCC tests with constant load on Pressurfect $^\circ$ XP and ASTM 304L in 40% CaCl $_2$, pH = 6.5, at 100 $^\circ$ C (210 $^\circ$ F) with aerated test solution. The results in Figure 5 indicate that Pressurfect XP can be used in dilute oxygen-bearing chloride solutions up to about 125 $^\circ$ C (260 $^\circ$ F) without any risk of SCC. This is much higher than for ASTM 304/ 304L, which should not be used above 60 $^\circ$ C (140 $^\circ$ F) in such environments.

The results of SCC testing of Pressurfect* XP in chloride solutions at high temperatures and pressures are presented in Figure 6. The curve for Pressurfect* XP is based on tests performed in various chloride contents and at different temperatures. Usually six separate measurements were taken at each measuring point. The testing method involved spring-loaded specimens stressed to the proof strength ($R_{p0.2}$) at the testing temperature, or U-bends in which the stress at the apex is at least equal to the proof strength of the solution annealed material. The oxygen content of the inlet water (refreshed autoclaves were used) was 4.6 to 10 ppm and the pH 4.5 to 7. The curve for ASTM 304/304L is based on published test results and on practical experience.

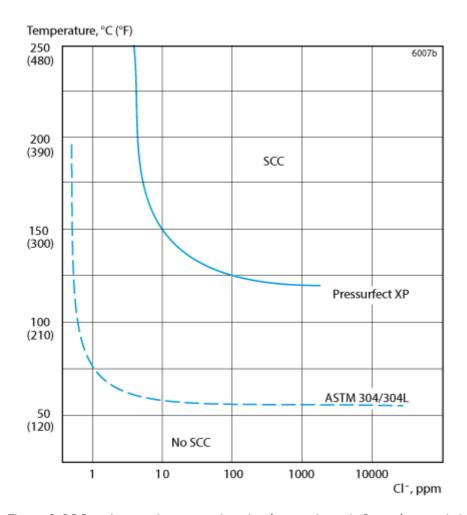


Figure 6. SCC resistance in oxygen-bearing (approximately 8 ppm) neutral chloride solutions. Testing time 1000 hours. Load > yield strength at testing temperature.

Intergranular corrosion

Pressurfect* XP is a modern duplex stainless steel in which the reformation of austenite in the heat-affected zone adjacent to the weld takes place quickly. This results in a microstructure that gives corrosion properties and toughness similar to that of the parent metal. Welded joints in Pressurfect* XP easily pass the Strauss intergranular corrosion test according to SS-EN ISO 3651-2 Method A.

Corrosion fatigue

Pressurfect® XP possesses higher strength and better corrosion resistance than ordinary austenitic stainless steels. Consequently, Pressurfect® XP has considerably better fatigue strength under corrosive conditions than such steels.

Forms of supply

Pressurfect® XP seamless duplex stainless steel tubes are supplied in the bright annealed condition.

Dimensions

Outside diameter, mm	Wall thickness, mm
8.0 - 12.0	0.89 - 3.0

18.0 - 30.0 0.89 - 3.0

Other dimensions can be supplied on request

Tolerances

Wall-thickness tolerance	OD tolerance
+/- 10%	+/- 0.75% with a minimum of +/- 0.08 mm

For special tolerance requirements, please contact Alleima.

Surface roughness

- OD ≥ 15 mm Ra (outside) ≤ 1.0 μm (by polishing)
- OD ≥ 15 mm Ra (inside) ≤ 2.0 μm depending on the wall-thickness/outside diameter ratio

For special roughness requirements please contact Alleima.

Mechanical properties

At 20°C - metric units

Proof strength	Tensile strength	Elong.		Hardness
R _{p0.2} ^a	R_{m}	Ab	$A_{2"}$	HRC
MPa	MPa	%	%	
≥450	690-820	≥25	≥25	≤30

At 68°F - imperial units

Proof strength	Tensile strength	Elong.		Hardness
R _{p0.2} ^a	R_{m}	Аь	A _{2"}	HRC
ksi	ksi	%	%	
≥65	100-119	≥25	≥25	≤30

¹ MPa = 1N/mm²

At high temperatures

If Pressurfect® XP is exposed to temperatures exceeding 280°C (540°F), for prolonged periods, the microstructure changes, which results in a reduction in impact strength. This does not necessarily affect the behavior of the material at the operating temperature. For example, heat exchanger tubes can be used at higher temperatures without any problems. Please contact Alleima for more information. For pressure vessel applications, 280°C (540°F) is required as a maximum according to VdTÜV-Wb 496.

a) $R_{p0.2}$ corresponds to 0.2% offset yield strength.

b) Based on $L_0 = 5.65 \sqrt{S_0}$ where LO is the original gauge length and SO the original cross-section area.

Metric units

R _{p0.2} MPa min
min
420
380
360
340
330
310

Imperial units

Temperature	Proof strength
	R _{p0.2}
°F	ksi
	min
120	61.0
200	56.0
300	52.0
400	49.0
500	47.5
600	46.0

Physical properties

Density: 7.8 g/cm³, 0.28 lb/in³

Specific heat capacity

Temperature, °C	J/(kg °C)	Temperature, °F	Btu/(lb °F)
20	490	68	0.12
100	505	200	0.12
200	530	400	0.13

Datasheet last updated 5/9/2025 6:38:11 AM (supersedes all previous editions)

Thermal conductivity

Metric units

Temperature °C	20	100	200			
Thermal conductivity W/(m °C)						
Pressurfect XP	16	17	18			
ASTM 304L	15	16	18			

Imperial units

Temperature °F	68	200	400		
Thermal conductivity Btu/(ft h °F)					
Pressurfect XP	9	9.5	10.5		
ASTM 304L	8.5	9.5	10.5		

Thermal expansion

Mean values in temperature ranges (x10⁻⁶)

Pressurfect XP has a far lower coefficient of thermal expansion than austenitic stainless steels and therefore possesses certain design advantages.

Metric units

Temperature °C	30-100	30-200	
	Per °C	Per °C	
Pressurfect XP	13.5	14.0	
Carbon steel	12.5	13.0	
ASTM 304L	16.5	17.0	

Imperial units

Temperature °F	86-200	86-400
	Per °F	Per °F
Pressurfect XP	7.5	8.0
Carbon steel	7.0	7.0
ASTM 304L	9.5	9.5

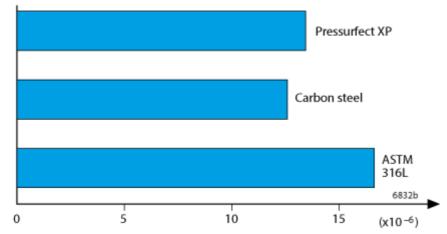


Figure 7. Thermal expansion, per °C (30-100°C, 86-210°F).

Modulus of elasticity, (x103)

Temperature, °C	MPa	Temperature, °F	ksi
20	200	68	29.0
100	194	200	28.2
200	186	400	27.0

Machining

Being a two-phase material (austenitic-ferritic), Pressurfect® XP will present a different tool wear profile from that of single-phase steels of type ASTM 304L. The cutting speed must, therefore, be slightly lower than that recommended for ASTM 304L.

Disclaimer:

Recommendations are for guidance only, and the suitability of a material for a specific application can be confirmed only when we know the actual service conditions. Continuous development may necessitate changes in technical data without notice. This datasheet is only valid for Alleima materials.

